Assist Handle and Step Kit Riding Mower

Model No. 79339

Loose Parts


Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	-	Drill holes for the assist handle.
Assist handle	1	
Bolt (5/16 x 1 inch)	4	Install the assist handle.
Flange nut (5/16 inch)	4	

Drilling Holes for the Assist Handle

Note: This procedure is only for units that do not have existing holes in the left front of the frame.

- 1. Check your frame for existing holes on the left front of the frame. If your frame does not have existing holes, proceed with drilling the holes.
- 2. Position the assist handle on the left side of the frame, flush to the top of the frame, and 3 mm (1/8 inch) behind the caster wheel bracket (Figure 1).
- 3. Using the assist handle as a template, mark the location of the holes.
- 4. Drill 4 holes, 11/32 inch in diameter, into the frame (Figure 1).

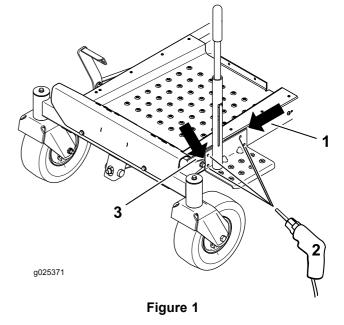


- 1. Flush to the top of the frame
- 3. 3 mm (1/8 inch) behind the caster wheel bracket
- 2. Mark and drill 4 holes (11/32 inch diameter)



Installing the Assist Handle

Install the assist handle to the machine with 4 bolts (5/16 x 1 inch) and 4 flange nuts (5/16 inch) (Figure 2).

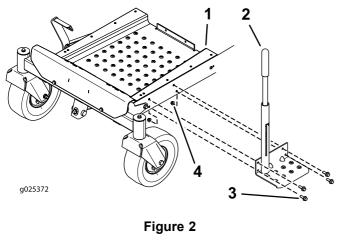

- 1. Frame
- 2. Assist handle
- Bolt (5/16 x 1 inch)
 Flange nut (5/16 inch)

Operation

Using the Handle

To raise the handle, pull up and rotate the handle in the Up position (Figure 3).

